



# Tamper-Proof Case

## Items



Left piece



Right piece




Allen  
wrench

## Compatible Models


DR550GW Series, DR650GW Series,  
DR650S Series, DR750S Series,  
DR900 Series

## Installation

1. Install a compatible BlackVue dashcam model.
2. Slide the **left piece** over the left end of the dashcam and position it around the mounting bracket.

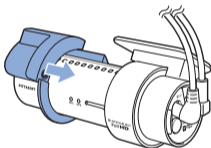

3. Align the **right piece** with the mounting bracket and slide it onto the right end of the dashcam.
- The right piece is printed with the BlackVue logo.

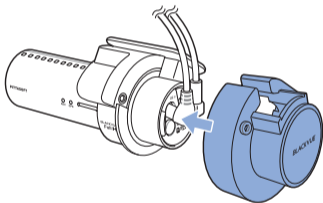

4. Push the two pieces together and use the Allen wrench to tighten the two screws.

## Case type

- **BTC-1A:** Regular type suitable for sedans, SUVs, sports cars, etc. (windshield angle of  $20^{\circ}$ – $60^{\circ}$  with the horizontal)
- **BTC-1B:** Vertical windshield type suitable for trucks, buses, vans, etc. (windshield angle of  $60^{\circ}$ – $90^{\circ}$  with the horizontal)

 [facebook.com/BlackVueOfficial](https://facebook.com/BlackVueOfficial)

[www.blackvue.com](http://www.blackvue.com)

Made in Korea